

SMART GRAB INSTRUCTIONAL MANUAL

Integrity Worldwide Inc. www.iwwinc.ca

Preparation

Always use required Personal Fall Protection Equipment (PFPE) when installing, repositioning, and removing edge protection systems!

Use warning lines to prevent unauthorized personnel into work area.





Specifications

Code: SMF-SG

Weight: 14.88 lb (6.75 kg)


Minimum opening: 3" (76 mm)

Maximum opening: 26" (660 mm)





Parts

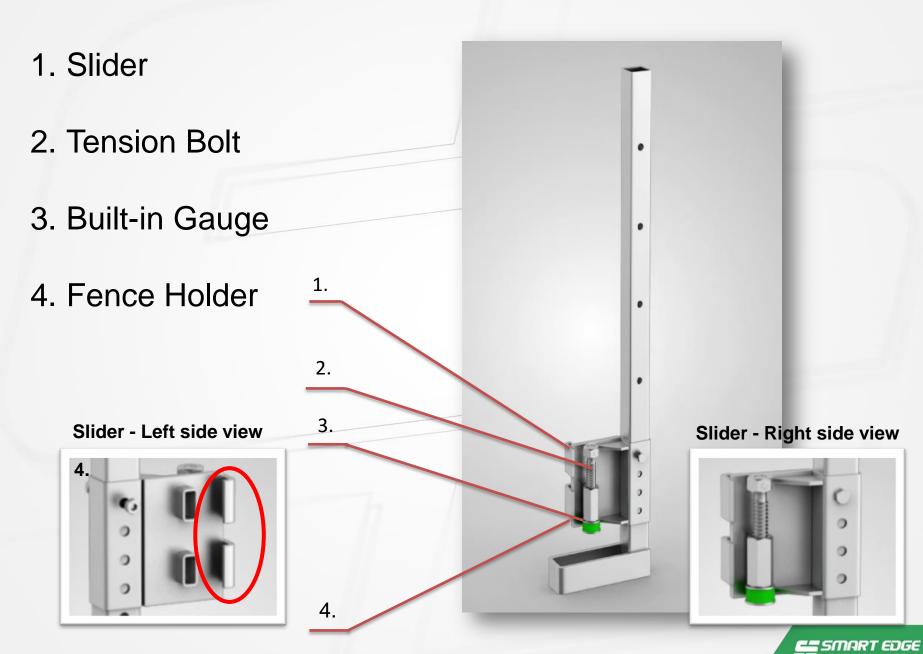



NOTE: Prior to moving the Smart Grab to the edge

 Adjust the Slider height by additional 1" (25 mm) of slab thickness.

2. Secure Slider with nut and bolt to nearest positioning hole.

Slab + 1" (25 mm)

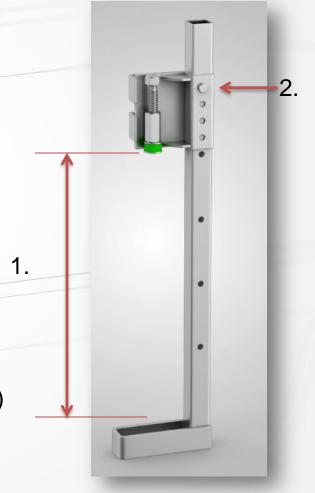

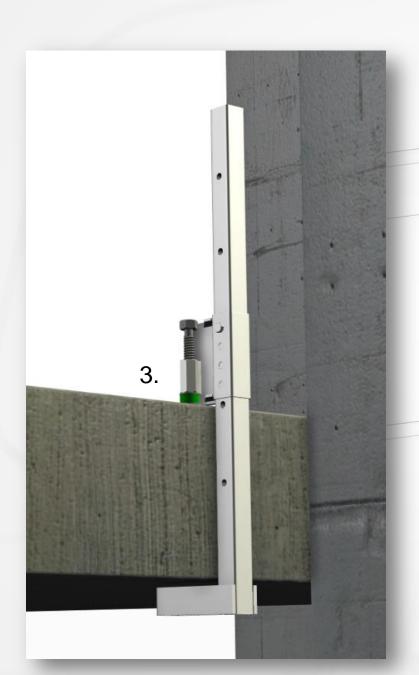


3. Position the Smart Grab to slab edge.



4. Tighten the Tension Bolt with impact gun or extended wrench.

Use the correct size of socket for tightening the Tension Bolt.
Socket size should be 30 mm.

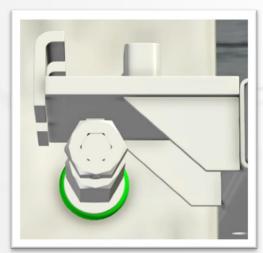

When installed correctly green ring will be visible.




NOTE: Impact gun socket size 30 mm







Installation of Smart Grabs should start from left to right.

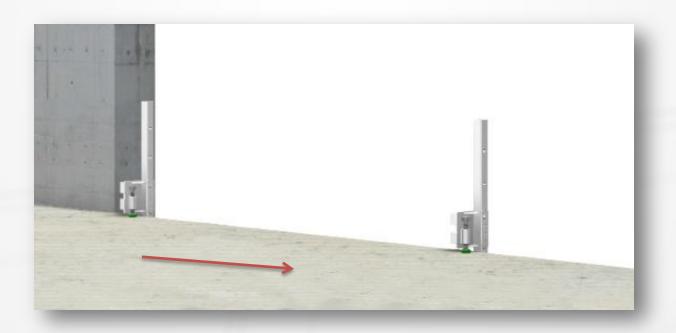



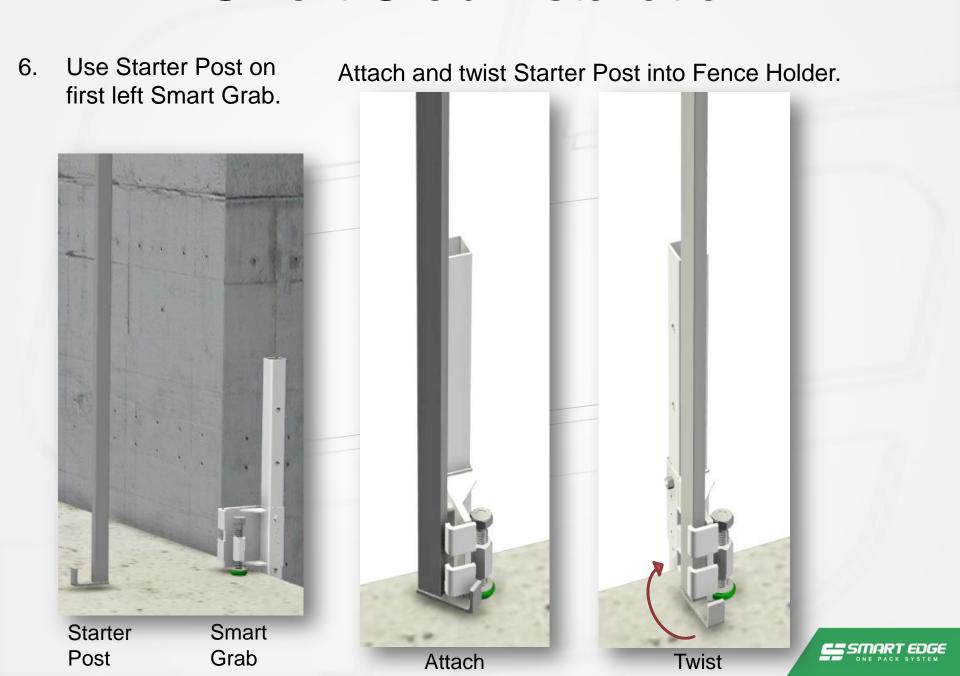


Smart Fence Installation

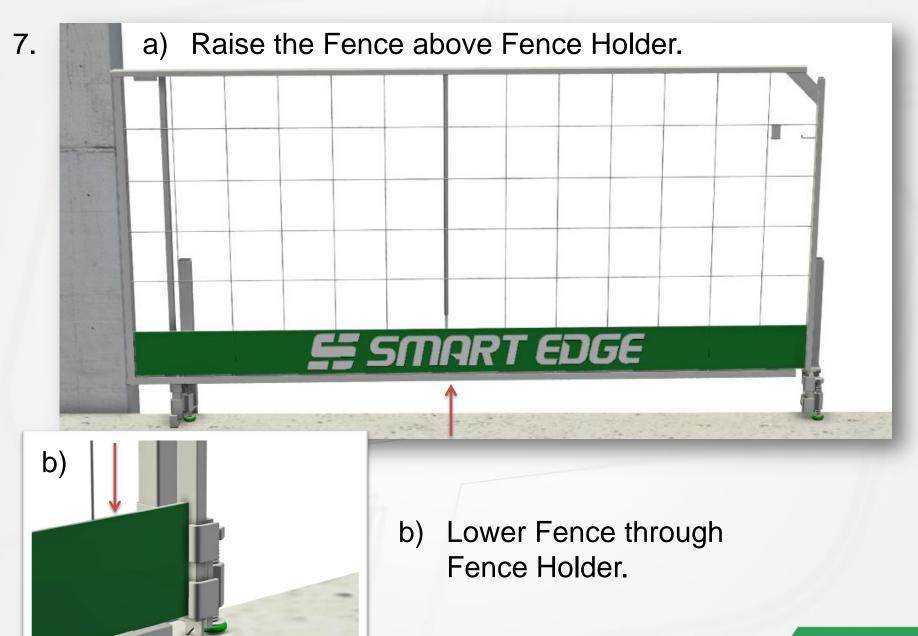

Smart Fence Installation

8. Secure Fence to Starter Post with zip-ties provided.


Continue installing Fences and secure with Fence Clip.

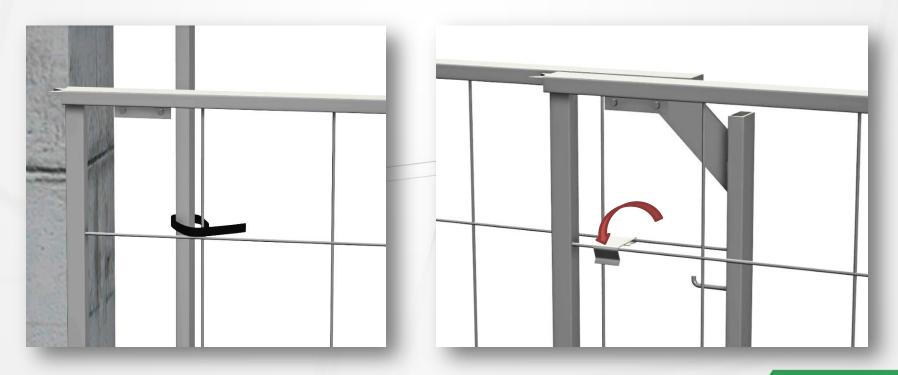



Fence Dismantling

- 10. Release the Fence Clip.
- 11. Swing Fence inwards and detach from Smart Grab.

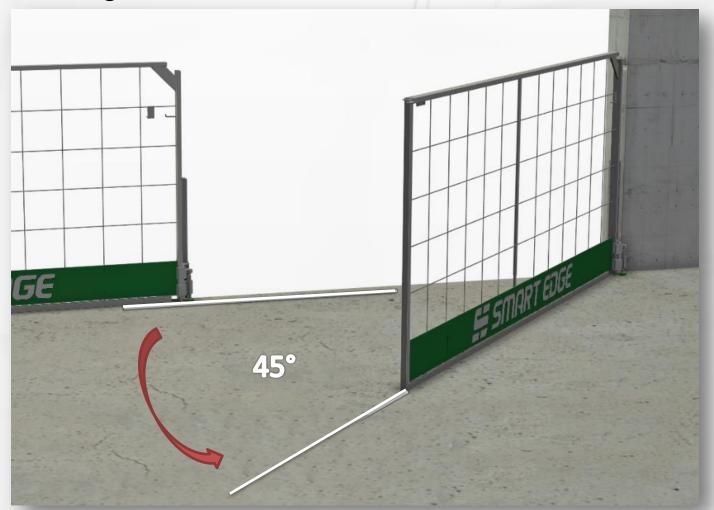

NOTE: Fences should be dismantled from right to left.





For more technical information contact us at: info@iwwinc.ca

Integrity Worldwide Inc. www.iwwinc.ca